

Git repository: <https://www.d-logic.com/code/nfc-rfid-reader-sdk/ufr-ds-examples-android>

uFR Series NFC Reader API: <https://www.d-logic.com/code/nfc-rfid-reader-sdk/ufr-doc.git>

Usage

Communication with the reader

Communication with uFR Series readers' can be established by utilizing options provided:

- **Reader type:** Based on the selection, baudrate is predetermined.
 - 0 - Auto, will test device communication at 1Mbps first, then 115200 and finally 250Kbps. OTG cable connection only.
 - 1: 1Mbps baudrate, OTG cable connection only.
 - 2: 115200bps, OTG cable connection only.
 - 3: for uFR Online series only, will display additional options **port name** and **port interface**
- **Port name :** depending on **port interface** this field requires:
 - **IP address:** when **port interface** is set to either UDP or TCP
 - **Serial number** or **mac address:** when **port interface** is set to BT Serial or BLE
- **Reader args:** Provided additional options for communication. Useful when the device has non standard baudrate or reset condition changed/disabled.

Card formatting

This software includes the following:

- Switching card master key from DES to AES
- Getting available free memory
- Formatting card via AES master key from the reader or providing one in the designated field

CARD FORMATTING

DES TO AES

GET FREE MEMORY

AUTHENTICATION: READER PROVIDED

READER KEY NR:

PROVIDED KEY: HEX ASCII

CARD FORMAT

DES to AES

CARD FORMATTING

DES TO AES

GET FREE MEMORY

By using the provided **DES TO AES** button, the user will switch the card master key from the default DES key to the AES key.

This option relies on using default DES key (8 0x00 hex bytes) to authorize key change to AES (new key will be 16 0x00 hex bytes)

This method relies on the card's **master** key for formatting.

Highlighted options above are used for this action.

Depending on the users' **AUTHENTICATION** selection, it will be necessary to provide either a valid key index stored in the reader (**READER KEY NR**) or manually input AES key in the **PROVIDED KEY** field.

Creating the applications and files

Create application

CREATE APPLICATION

AID:

MAX KEY NR:

SETTINGS:

AUTHENTICATION: READER PROVIDED

READER KEY NR:

PROVIDED KEY: HEX ASCII

CREATE APPLICATION

By providing a valid AID (Application Identifier) in the designated text field and using the **CREATE APPLICATION** button, a new Desfire® application will be created on the tag.

Valid AIDs for creation by default are in the range from 0x000001 to 0xFFFFFFFF

Application ID 0 (0x000000) is usually already defined and contains the card's master key.

Other parameters necessary for creating an application are:

- **MAX KEY NR:** Defines maximum number of keys in the newly created application. Application can have up to 14 keys stored.
- **SETTINGS:** Defines application master key settings. Valid values are in range 0-15 and the values are calculated in the following manner

Bit 3	Bit 2	Bit 1	Bit 0
If set to 1 - Allows a future change of this configuration	If set to 1 - Master key is not required for creation/deletion of card applications	If set to 1 - allows directory list access without master key authentication	If set to 1 - allows master key change

By default, **master key settings** have value of **15** (binary: **00001111**)

- **AUTHENTICATION:** Depending on the user's selection, card operation will be authorized using the AES key stored in the reader, or the one provided manually in the designated **PROVIDED KEY** field.

Details about these parameters when creating an application, and more, can be found in our **uFR Series NFC Reader API**: <https://www.d-logic.com/code/nfc-rfid-reader-sdk/ufr-doc.git>

Method used for application creation in this software are:

- **uFR_int_DesfireCreateAesApplication_aes**
- **uFR_int_DesfireCreateAesApplication_aes_PK**

Create Std data file

CREATE FILE

AID:	<input type="text" value="1"/>
FILE ID:	<input type="text" value="0"/>
FILE SIZE:	<input type="text" value="100"/>
READ KEY NR:	<input type="text" value="0"/>
WRITE KEY NR:	<input type="text" value="0"/>
READ/WRITE KEY NR:	<input type="text" value="0"/>
CHANGE KEY NR:	<input type="text" value="0"/>
COMM. SETTINGS:	<input type="text" value="0"/>
AUTHENTICATION:	<input checked="" type="radio"/> READER <input type="radio"/> PROVIDED
READER KEY NR:	<input type="text" value="0"/>
PROVIDED KEY:	<input checked="" type="radio"/> HEX <input type="radio"/> ASCII
	<input type="text" value="000000000000000000000000000000000000"/>

CREATE FILE

By using the **CREATE STD FILE**, a file that will be used for reading/writing operations will be created on the tag based on the parameters provided.

Valid **FILE IDs** for creation are in the range of 0-31. Every AID can have up to 32 files and the number of **AIDs** can be expanded based on the card's size.

Other parameters used for creation:

- **FILE SIZE**

Used to determine the size of the new file in bytes.

- **READ KEY NR**
- **WRITE KEY NR**
- **READ/WRITE KEY NR**
- **CHANGE KEY NR**

Used to determine card access rights. Values in range **0-13** will reference the application key with this number to authorize the related card operation.

If a value is set to **14** "free access" is granted, implying that card operation will require no previous authorization.

However, if set to **15**, "deny access" is set. For example, if **WRITE KEY NR** is set, file type will be set to **READ ONLY**.

- **COMM. SETTINGS**

Communication settings. Plain communication settings value is 0x00; Communication secured by MACing, value is 0x01; Fully enciphered communication setting, value is 0x03

Authentication of this operation can be done via reader key or manually with the provided key.

Important: File size **cannot** be changed after the file is created. Upon file deletion from the card, a memory that was allocated based on the file size provided **will not be freed** until the card is formatted via **FORMAT CARD** button. Upon file deletion, the file can be created again with the same file id.

Details about these parameters when creating a Std data file, and more, can be found in our **uFR Series NFC Reader API**: <https://www.d-logic.com/code/nfc-rfid-reader-sdk/ufr-doc.git>

Method used for application creation in this software are:

- **uFR_int_DesfireCreateAesApplication_aes**
- **uFR_int_DesfireCreateAesApplication_aes_PK**

Get file settings

AID:

FILE ID:

STD FILE SETTINGS

FILE TYPE:

FILE SIZE:

READ KEY NR:

WRITE KEY NR:

READ/WRITE KEY NR:

CHANGE KEY NR:

COMM. SETTINGS

AUTHENTICATION: READER PROVIDED

READER KEY NR:

PROVIDED KEY: HEX ASCII

GET FILE SETTINGS

By using the **GET FILE SETTINGS** button, the user can retrieve information about the created std data file. Valid **AID** and **FILE ID** are mandatory for this operation.

Parameters returned on success are:

File type - 0 indicates it is STD data file

File size - total amount of data that this file can store

Read key nr - read access settings for this file (configured while creating the file)

Writekey nr - write access settings for this file (configured while creating the file)

Read/Write key nr - read/write access settings for this file (configured while creating the file)

Change key nr - Change settings access for this file (configured while creating the file)

Comm. settings - communication mode set for this file (configured while creating the file)

Read/Write to file

Reading the file

READ STD FILE

AID:

AID KEY NR:

FILE ID:

OFFSET:

COMM. SETTINGS:

LENGTH:

DATA: HEX ASCII

AUTHENTICATION: READER PROVIDED

READER KEY NR:

PROVIDED KEY: HEX ASCII

READ STD FILE

By specifying the necessary parameters and using the **READ STD FILE** button, the reader will try to read and display the data in the selected format.

Parameters for card read operation are:

- **AID**

Application identifier that contains the file

- **AID KEY NR**

Application key that will be referenced when reading the data for the purpose of authorization.

- **FILE ID**

ID of the file that will be read

- **OFFSET**

Starting position when reading, offset **0** will start reading from the beginning of the file.

- **COMM. SETTINGS**

As mentioned previously, can be 0 - PLAIN, 1-MACKed, 3-ENCIPHERED

- **LENGTH**

Amount of data to be read expressed as number of bytes.

- **DATA**

Successfully read data will be displayed in this field, based on the selected **HEX** or **ASCII** format

Authentication of this operation can be done via reader key or manually with the provided key.

Writing to the file

WRITE FILE

AID:

AID KEY NR:

FILE ID:

OFFSET:

COMM. SETTINGS:

LENGTH:

DATA: HEX ASCII

DLOGIC TEST DATA

AUTHENTICATION: READER PROVIDED

READER KEY NR:

PROVIDED KEY: HEX ASCII

WRITE FILE

Same parameter format applies as with the previous **READ** option.

Provide the **AID** and **FILE ID** of the file, and finally input the data. The **LENGTH** field will be populated automatically as the user enters the data and will display the length of the current input. Length will be calculated based on the format selected (HEX/ASCII).

Finally, use the **WRITE FILE** button to store the data on the tag, in the selected format.


Method used for reading/writing data in this software are:

- **uFR_int_DesfireReadStdDataFile_aes**
- **uFR_int_DesfireWriteStdDataFile_aes**

Details about the methods used for reading/writing data can be found in our **uFR Series NFC Reader API**: <https://www.d-logic.com/code/nfc-rfid-reader-sdk/ufr-doc.git>

Reader key write

Switch to the tab **READER KEY** to gain access to these options.

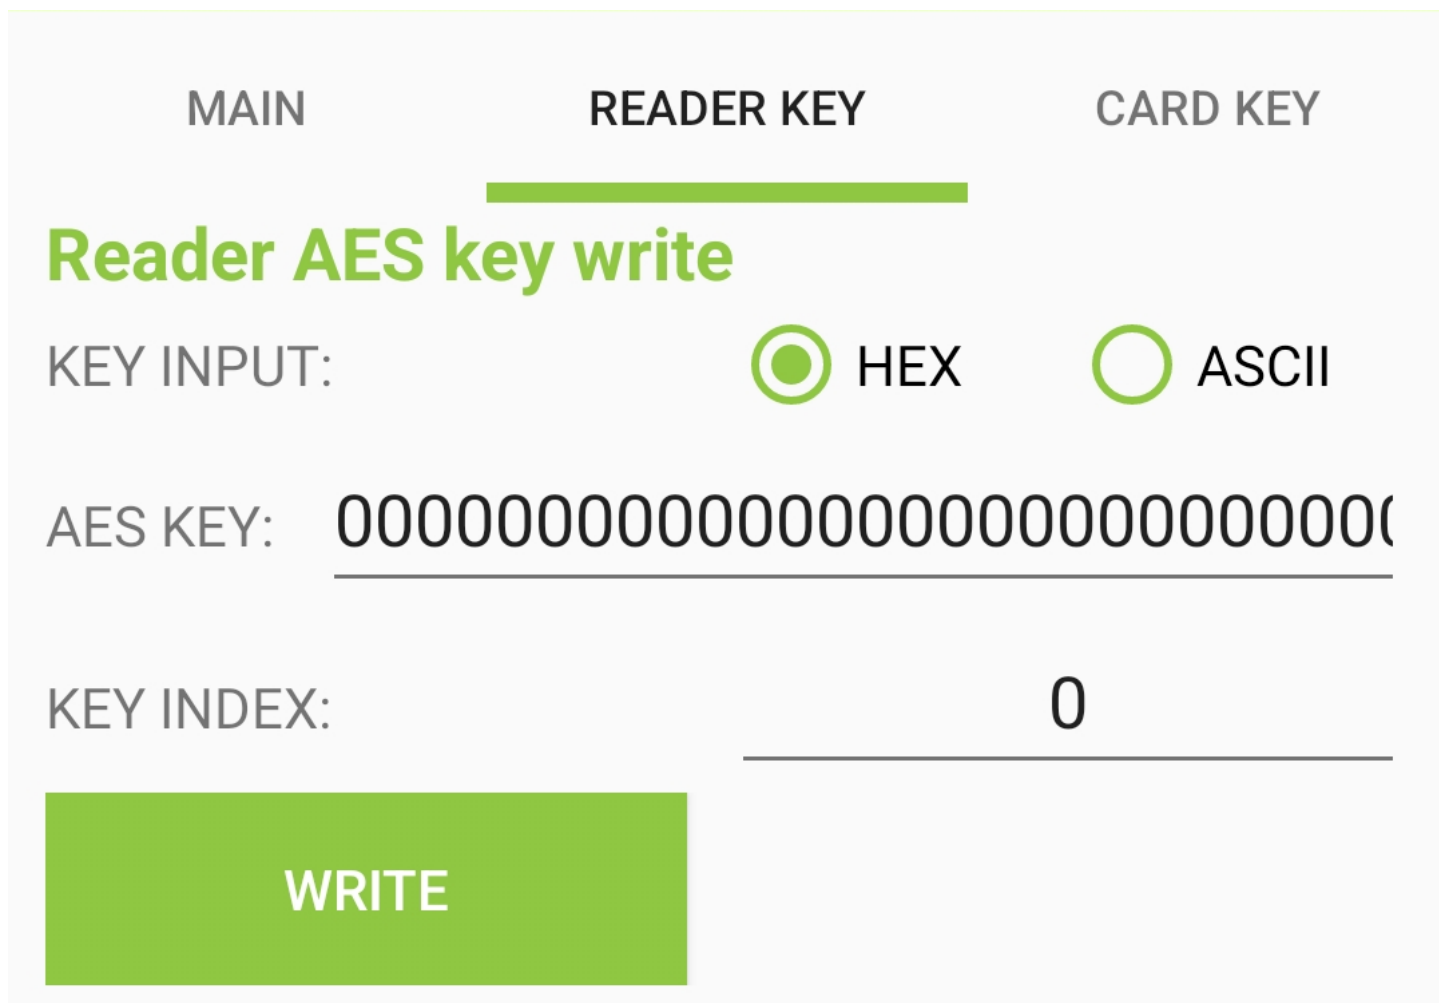

The screenshot shows a web interface with three tabs: MAIN, READER KEY, and CARD KEY. The READER KEY tab is selected and highlighted with a green bar. Below the tabs, the title "Reader AES key write" is displayed in green. There are two radio buttons for "KEY INPUT": "HEX" (selected) and "ASCII". Below this, the "AES KEY" field contains a long string of zeros. The "KEY INDEX" field contains the number "0". At the bottom, there is a large green button labeled "WRITE".

By using the **WRITE KEY** button, the AES key will be stored in the reader based on the KEY INDEX provided. The available key index range for AES keys is 0-15.

Methods used for writing reader keys in this example are:

- **uFR_int_DesfireWriteAesKey**

Card key write

Switch to the tab **CARD KEY** to gain access to these options.

MAIN	READER KEY	CARD KEY
CHANGE APPLICATION KEY		
Application identifier (AID) options		
AID:		1
AID key nr. (auth):		0
AID key nr:		0
KEYS		
AUTHENTICATION:	<input checked="" type="radio"/> READER	<input type="radio"/> PROVIDED
Reader key options:		
Auth. key nr:		0
Old key nr:		0
New key nr:		0
Provided key options:		
Key type:	<input checked="" type="radio"/> HEX	<input type="radio"/> ASCII
Auth. key:	00000000000000000000000000000000	
Old key:	00000000000000000000000000000000	
New key:	FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF	
CHANGE APPLICATION KEY		

These options give access to changing keys stored on the Desfire® card based on the parameters provided and card key settings.

When changing the key for **AID 0** - you will be notified that it will be the **card master key** that will be changed, in this case, parameters **AID key nr. (auth.)** and **AID key nr.** will be ignored since they are related to the other card applications that contain more than one key and have their AID different from 0.

Parameters

Application identifier options (AID):

AID - Application Identifier whose key will be changed

AID key nr (auth.) - Index of the application key that will be used to authenticate key changing.

AID key nr. - Index of the application key that will be changed

Key type: Specifies the input source of the keys. Whether using the keys stored in the uFR reader or providing them manually in the designated fields below (Under **Provided key options**)

Reader key options:

Auth. key nr - Reader key index that will be used for the authentication

Old key nr - Key that will be changed, provided from the reader.

New key nr - New key to be stored in the card, provided from the reader.

Provided key options:

Keys format - Specifies format of the provided keys. **HEX** input requires 16 hex bytes, **ASCII** requires 16 characters long keys.

Auth key - Provided key that will be used to authenticate card key change operation

Old key - Provided old key that currently exists on the card

New key - Provided new key that will be stored on the card.

Methods used for changing keys in this example are:

- **uFR_int_DesfireChangeMasterKey(_PK)** - when changes are made to the card Master key, and
- **uFR_int_DesfireChangeAesKey_aes(_PK)** - when changing card application keys

For more details on how these methods work, refer to **uFR Series NFC Reader API**:

<https://www.d-logic.com/code/nfc-rfid-reader-sdk/ufr-doc.git>

Revision history

Date	Version	Comment
2023-03-15	1.5	Get file settings section added.
2023-02-10	1.1	Updated for app version 1.1
2023-02-09	1.0	Base document