
## Install FTDI Drivers on a Mac OSX system

*Note:* The screen shots in this tutorial are from OS X 10.6. The process should be very similar, if not exactly the same, for other versions of Mac OS X.

1. In some cases, when you connect one of our FTDI devices (RS11, HR12, MD33) to a Mac OS X, the drivers are installed automatically. However, most of the time, you will need to install the drivers. To check to see if there are any drivers installed, open Terminal window (Finder->Go->Utilities->Terminal).

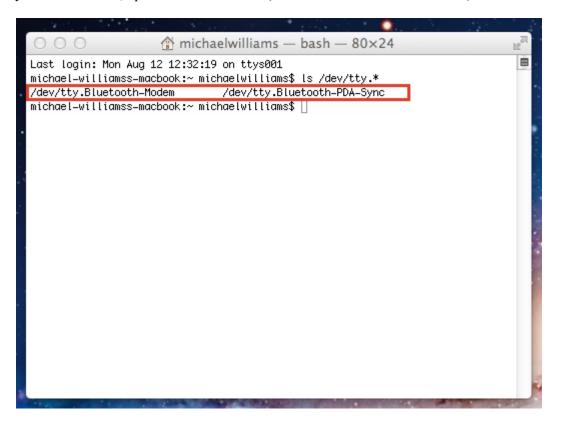


2. With the Terminal window open, type in "ls /dev/tty.\*". This will show what devices are connected to your Mac. In the example above, there are two bluetooth devices, but the FTDI device is not shown. You can go to our website's download page (<u>www.nolandeng.com/all\_downloads.php</u>) to get the drivers needed.

3. Now we need to determine if you need the x86 or x64 bit version of the drivers. Click on the apple icon in the top left of the screen, and choose 'About this Mac'.


4. Check under 'Processor' to see which version you have. Follow the chart below to determine which drivers to download.

\varTheta 🔿 🔿 About This Mac		
Å	Processor Name	32- or 64-bit
	Intel Core Solo	32 bit
MacOSY	Intel Core Duo	32 bit
Mac OS X	Intel Core 2 Duo	64 bit
Version 10.7.5	Intel Quad-Core Xeon	64 bit
Software Update	Dual-Core Intel Xeon	64 bit
Processor 2.13 GHz Intel Core 2 Duo	Quad-Core Intel Xeon	64 bit
Memory 2 GB 800 MHz DDR2 SDRAM	Core i3	64 bit
Startup Disk Macintosh HD	Core i5	64 bit
More Info	Core i7	64 bit
TM and © 1983-2012 Apple Inc. All Rights Reserved. License Agreement		

5.Download the files from the site by clicking on the link. Locate the .dmg file that was downloaded to your computer, and double click on it. If you are not sure which version of OS X you have, use the same process as before when finding the processor type. Click on the apple and choose 'About This Mac'. You will then see Version 10.X.Y–use the 10.X to determine your system version. From our example above, our version is 10.7 which, as shown below, is the item to select.

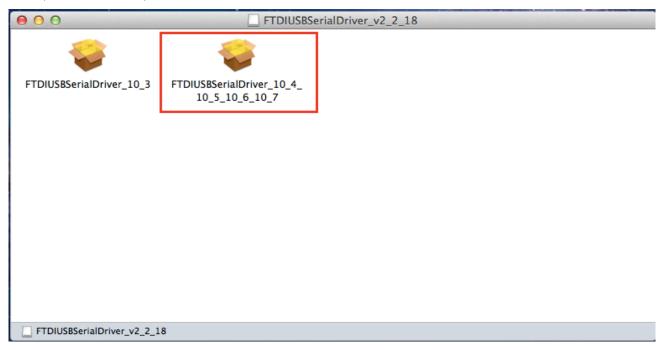

6.Continue through the installation, and wait for it to finish. Then click 'Close.'

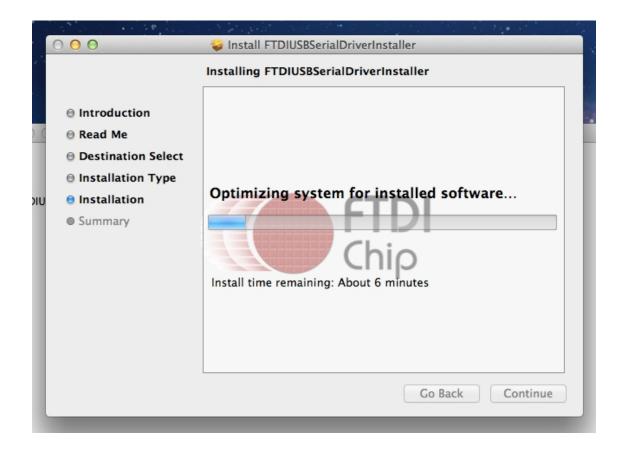

7. Now open the Terminal window and retype "ls /dev/tty.\*". The device showing "usbserial" is your FTDI device. This is what you will use to connect to device.

⊖ O	2	
michael-williamss-macbook:~ michaelwilliams\$ ls /dev/tty.* /dev/tty.Bluetooth-Modem /dev/tty.Bluetooth-PDA-Sync		
michael-williamss-macbook:~ mic <mark>haelwilliams\$ ls /dev/ttv.*</mark>		
/dev/tty.Bluetooth-Modem /dev/tty.usbserial-DAWELTA0		
/dev/tty.Bluetooth-PDA-Sync michael-williamss-macbook:~ michaelwilliams\$		
		-
	2	

8. Congratulations! You have successfully setup your FTDI device for MAC. To verify this, you can download a terminal program called, "goSerial" at <u>http://www.furrysoft.de/?page=goserial</u>.

i 🕙 🕙	mtitled	$\bigcirc$
× .		F
\$GPGGA,150024 34,2804.875 \$HCHDG,,,W,2.3,E	5,N,U8U36.483,W,1,U8,1.6,12.U,M,-29.3,M,,	
	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	
	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	
\$GPGGA,150024.84,2804.87	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	
	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	
	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	4
	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	
	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	
	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	
\$HCHDG,,,W,2.3,E \$GPGGA,150024.84,2804.87	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	
\$HCHDG,,,W,2.3,E \$GPGGA,150024.84,2804.87	5,N,08036.483,W,1,08,1.6,12.0,M,-29.3,M,,	0
\$HCHDG,,,W,2.3,E		
		an man man in para mangar ta
Online: usbmodem621 • 48	200 - RALL - RTS - CTS	